


ACD-D Removal Instructions





1. Remove the drawer box with the double-stacked cutlery divider from the cabinet. This is done by pulling the drawer until it is fully open and squeezing the release (1a) of both orange clips under the box simultaneously.

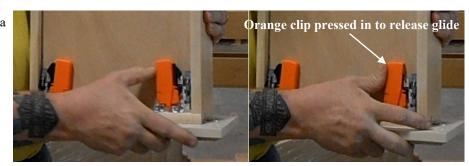






2. Slide the top divider to the back of the box. 2a. Release the divider from the box by pressing on the black release button labeled PUSH (2b) on the side of the glide. Pull the top divider the remainder of the way from the box. Close the extended glide members (2c, 2d).



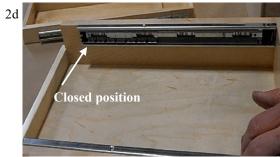



3. Grasp the lower divider and lift the back (3a) of the divider up, clearing the back of the drawer box (3b). Slide the lower divider out of the box(3c).







Now a knob or handle can be attached at the front of the drawer box. When re-installing be sure the glides for the top divider and the glides for the actual drawer box 'click' back into place.